






[] > [WB White Balance] > Desired option* > []

- * When you select [ Custom WB], set the custom white balance with the following procedure before touching [].
- The icon of the selected white balance setting will appear on the screen.

To set the custom white balance

- 1** Point the camcorder at a white object, so it fills the screen.
- 2** Touch [Set WB].
 - When the adjustment is completed,  stops flashing and disappears. The camcorder will retain the custom white balance even if you turn it off.



Options (◆ Default value)

[AWB Automatic]◆

The camcorder automatically sets the white balance for natural looking colors.

[☀ Daylight]

To record outdoors.


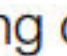
[💡 Tungsten]

To record under tungsten and tungsten-type 3-wavelength fluorescent lighting.

[🎨 Custom WB]

Use the custom white balance setting to make white subjects appear white under colored lighting.



- When you select the custom white balance:
 - Set  [Zoom Type] to [32x Optical].
 - Reset the white balance when you change locations or the lighting or other conditions change.
 - Depending on the light source,  may keep flashing. The result will still be better than with [AWB Automatic].
- Custom white balance may provide better results in the following cases.
 - Changing lighting conditions.
 - Close-ups.
 - Subjects in a single color (sky, sea or forest).
 - Under mercury lamps, certain types of fluorescent lights and LED lights.